


ИНСТРУКЦИЯ ПО МОНТАЖУ И ЭКСПЛУАТАЦИИ

PRIMER БЛОК РОЗЕТОЧНЫЙ С ВЫДВИЖНОЙ КРЫШКОЙ 4 МОДУЛЯ


PM.BR51.001.1.IM

Схема изделия

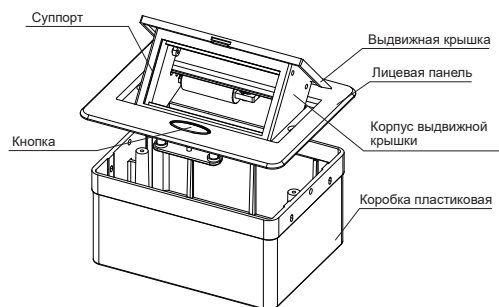

1. Вырез монтажного отверстия

Сделать прямоугольный вырез размером 142×108 мм на выбранной поверхности. Толщина поверхности должна быть не менее 15 мм.

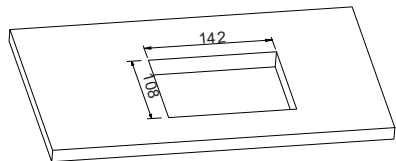

2. Соединение проводов


2.1 Выкрутить винты, фиксирующие опорную алюминиевую пластину суппорта, вытянуть ее из корпуса изделия, затем достать суппорт.

2.2 Протянуть сетевой шнур через отверстие для ввода кабеля в нижней части коробки, предварительно удалив заглушку. Далее протянуть его через отверстие выдвижной крышки и суппорта. Подключить провода к соответствующим зажимам ЭУИ.

2.3 Защелкнуть ЭУИ в суппорт и установить в выдвижную крышку. Убедиться, что суппорт с ЭУИ установлены на одном уровне с поверхностью корпуса выдвижной крышки.

2.4 Задвинуть алюминиевую пластину в отверстие корпуса выдвижной крышки (1).

2.5 Закрепить алюминиевую пластину винтами (2).

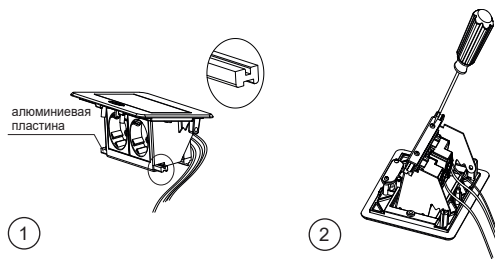


3. Установка коробки и лицевой панели

3.1 Поместить коробку с сетевым шнуром в вырезанное монтажное отверстие, убедившись, что она находится на одном уровне с рабочей поверхностью. Закрепить коробку, используя два самореза с плоской головкой М3×18 (1).

3.2 Вставить лицевую панель в коробку, убедившись что отверстия в коробке и лицевой панели точно совпадают. Закрепить панель к коробке, используя два самореза с плоской головкой М3×18 (2).

3.3 Закрепить сетевой шнур U-образным зажимом с помощью двух саморезов М3×5 в нижней части коробки (3).

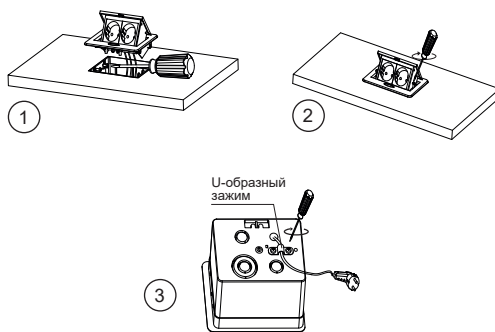

4. Эксплуатация изделия

4.1 Чтобы открыть крышку, необходимо нажать на кнопку с небольшим усилием, крышка медленно откроется.


4.2 Чтобы закрыть крышку, надавить на поверхность крышки с небольшим усилием до тех пор пока она полностью не закроется.

INSTALLATION AND OPERATION INSTRUCTION

PRIMER SOCKET BLOCK WITH RETRACTABLE COVER 4 MODULES


PM.BR51.001.1.IM

Product diagram

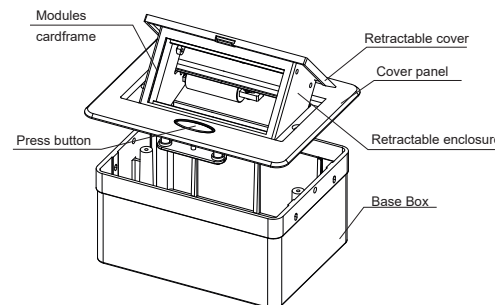

1. Cut-out opening

Make a rectangular cut-out 142×108 mm on the desired desk or table surface, desktop thickness should be more than 15 mm.

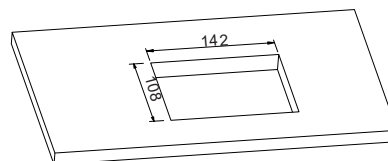

2. Wires connection


2.1 Unscrew the screws securing the card frame aluminum plate, pull it out of the product body, then remove the card frame.

2.2 Pull the power cord through the cable entry hole at the bottom of the box, after removing the plug. Next, pull it through the opening of the retractable cover and card frame. Insert the wires into the corresponding terminals on the back of the modules.

2.3 Snap modules into the card frame and install into the retractable enclosure. Ensure that the modules lie flush with the surface of retractable enclosure frame.

2.4 Slide the aluminum plate into the retractable enclosure beam (1).

2.5 Secure the aluminum plate with screws (2).

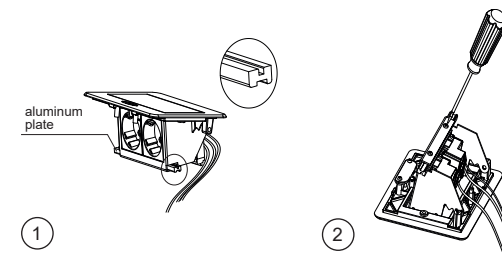


3. Installing base box and cover panel

3.1 Feed power cord through the cut-out, mount the base box into the cut-out and be sure it's fully leveled with the worktop. When in place, secure the base box from the side using the four M3×18 flat-head self-tapping screws (1).

3.2 Install the product panel into the base box, verify precise alignment to ensure the two holes on the base box for mounting the panel are revealed. Secure the panel to the base box using two M3×18 flat-head self-tapping screws (2).

3.3 Secure the power cord at the box bottom with a U-shaped clip using two M3×5 screws (3).

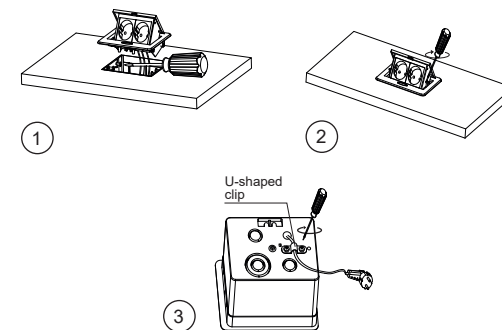

4. Operating instructions

4.1 To open the cover, apply gentle pressure on button, cover will open slowly (1).

4.2 Push down on the cover surface using gentle pressure until the product is secured in closed position (2).



Произведено: Чжэцзян Сино Электро-Техникал Ко., ЛТД
A5 билдинг, Сулюй Индастриал Зон, Люши, Юэцин, Чжэцзян, Китай, 325604
Made by: ZHEJIANG SINO ELECTRO-TECHNICAL CO., LTD
A5 Building, Sulv Industrial Zone, Liushi, Yueqing, Zhejiang, China, 325604