

ШКАФ СЕРВЕРНЫЙ СЕРИИ ВУ ZPAS (КРЫША ХОЛОДНОГО КОРИДОРА)

Инструкция по монтажу

СОСТАВ КОМПЛЕКТА КРЫШИ ХОЛОДНОГО КОРИДОРА

Упаковка	
	① Стяжки – 2 шт.
	② Окна смотровые – 2 шт.
	③ Стекло – 1 шт.
	④ Гайка фланцевая 6 – 4 шт.
	⑤ Винт М8×20 – 4 шт.
	⑥ Болт М12×16 – 4 шт.
	⑦ Шайба 12 – 4 шт.
	⑧ Уплотнитель – 1 рулон

ПОРЯДОК МОНТАЖА

Для монтажа вам потребуются гаечные ключи 10 и 19 мм, а также отвертка крестовая.



После сборки крыши холодного коридора установите комплект дверей раздвижного холодного коридора ИТК by ZPAS по инструкции ZP.R.001.1ИМ.

Шаг 1

Распаковку изделия произведите слесарным ножом. Разрезание упаковки произведите аккуратно, чтобы не повредить защитное покрытие деталей в упаковке.

Шаг 2

Перед сборкой каркаса крыши приклейте уплотнитель (8) на окна смотровые (2) так, как указано на рисунке, предварительно приложив уплотнитель и отрезав нужную длину.

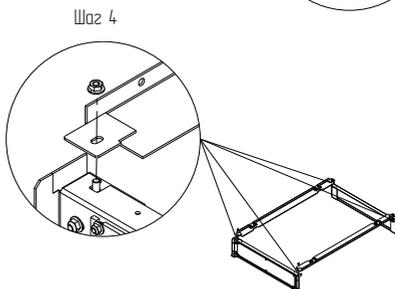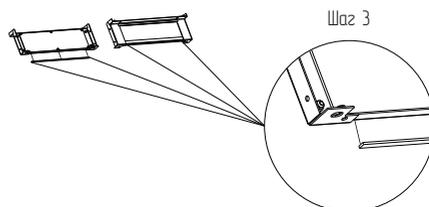

Шаг 3

Для сборки каркаса, расположите стяжки (1) и окна смотровые (2) так, чтобы шпильки на окнах смотровых совпали с отверстиями на стяжках. Закрепите гайками (4) в местах, показанных на рисунках.

Шаг 4



Расположите стекло (3) так, чтобы отверстия петель совпали с отверстиями на стяжках. Зафиксируйте винтами (5). Конструкция каркаса позволяет располагать стекло как слева, так и справа.

Шаг 5

Установите собранную конструкцию на два шкафа, расположенных напротив друг друга, так, чтобы отверстия окон смотровых (2) совпали с отверстиями в местах, показанных на рисунке. Зафиксируйте болтами (6) с шайбами (7).

Шаг 6

Повторите шаги 1–4 для последующих шкафов из коридора.

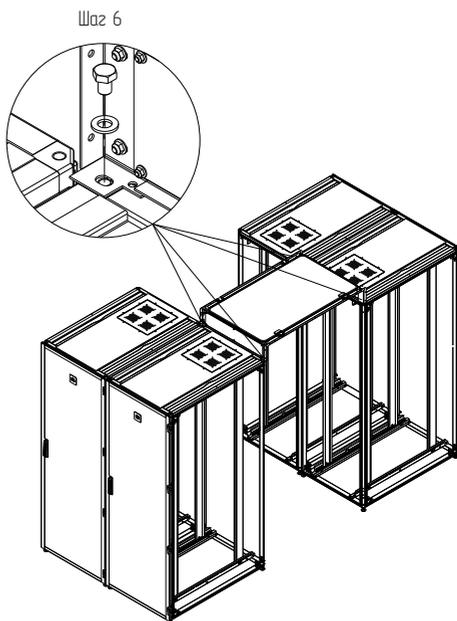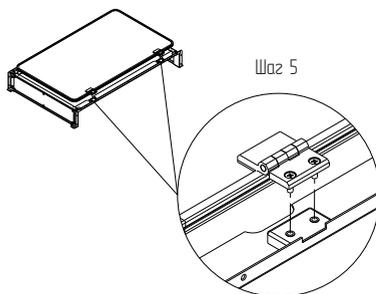

Примечание – На данном рисунке внутренние двери шкафов не показаны.

BY ZPAS SERIES SERVER RACK CABINET (COLD AISLE ROOF)

Installation manual

COLD AISLE ROOF BOX CONTENTS

Package	
	① Ties - 2 pcs.
	② Inspection windows - 2 pcs.
	③ Glass - 1 pc.
	④ Flange nut 6 - 4 pcs.
	⑤ M6x20 screw - 4 pcs.
	⑥ M12x16 bolt - 4 pcs.
	⑦ Plain washer 12 - 4 pcs.
	⑧ Sealing material - 1 roll

INSTALLATION ORDER



For installation, you need a 10 and 19 mm spanners and a phillips screwdriver. After assembling the roof of the cold aisle roof, install the kit of sliding doors of cold aisle IT by ZPAS according to the instruction Z.P.R.001.1ИМ.

Step 1

Unpack the product with a box cutter. Cut carefully in order not damage the protective covering of the details.

Step 2

Before assembling the roof frame, glue the sealing material (8) to the inspection windows (2) as shown in the figure, after attaching the sealing material and cutting off the desired length.

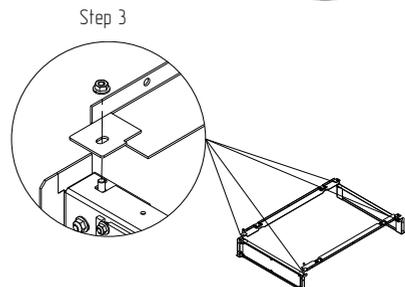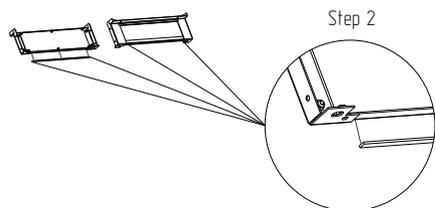

Step 3

To install the rack, place the ties (1) and inspection windows (2), in the position, where the studs on inspection windows consist with the holes in ties. Fasten with nuts (4) as shown in figures.

Step 4



Position the glass (3) in the way where the hinge holes consist with the tie holes. Fasten them up with the screws (5). Rack construction allows positioning the glass either on the left or on the right.

Step 5

Assemble the installed product in to cabinets, positioned one next to another in the way where inspection window holes (2) consist with the holes shown in the figure. Fasten it up with bolts (6) and plain washers (7).

Step 6

Repeat steps 1–4 to install other aisle cabinets.

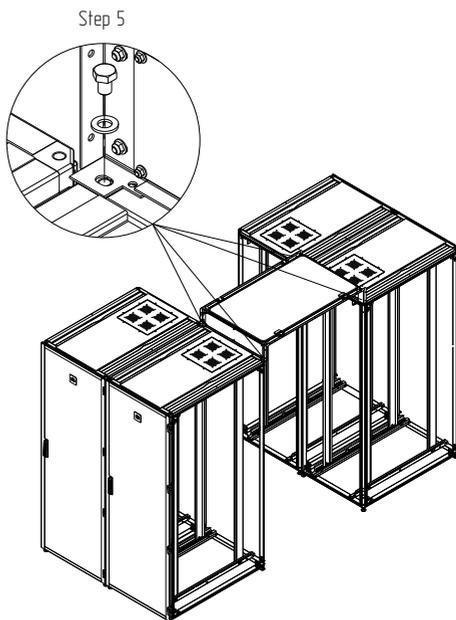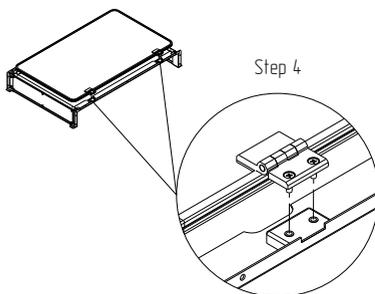

Note – The inner doors of the cabinets are not shown in this figure.